




# TRIPLE SYSTEMS

## 4-Wheel Drive Tractors With Planetary Drives Original Equipment New-Style Tiger Cat Conversion Kit

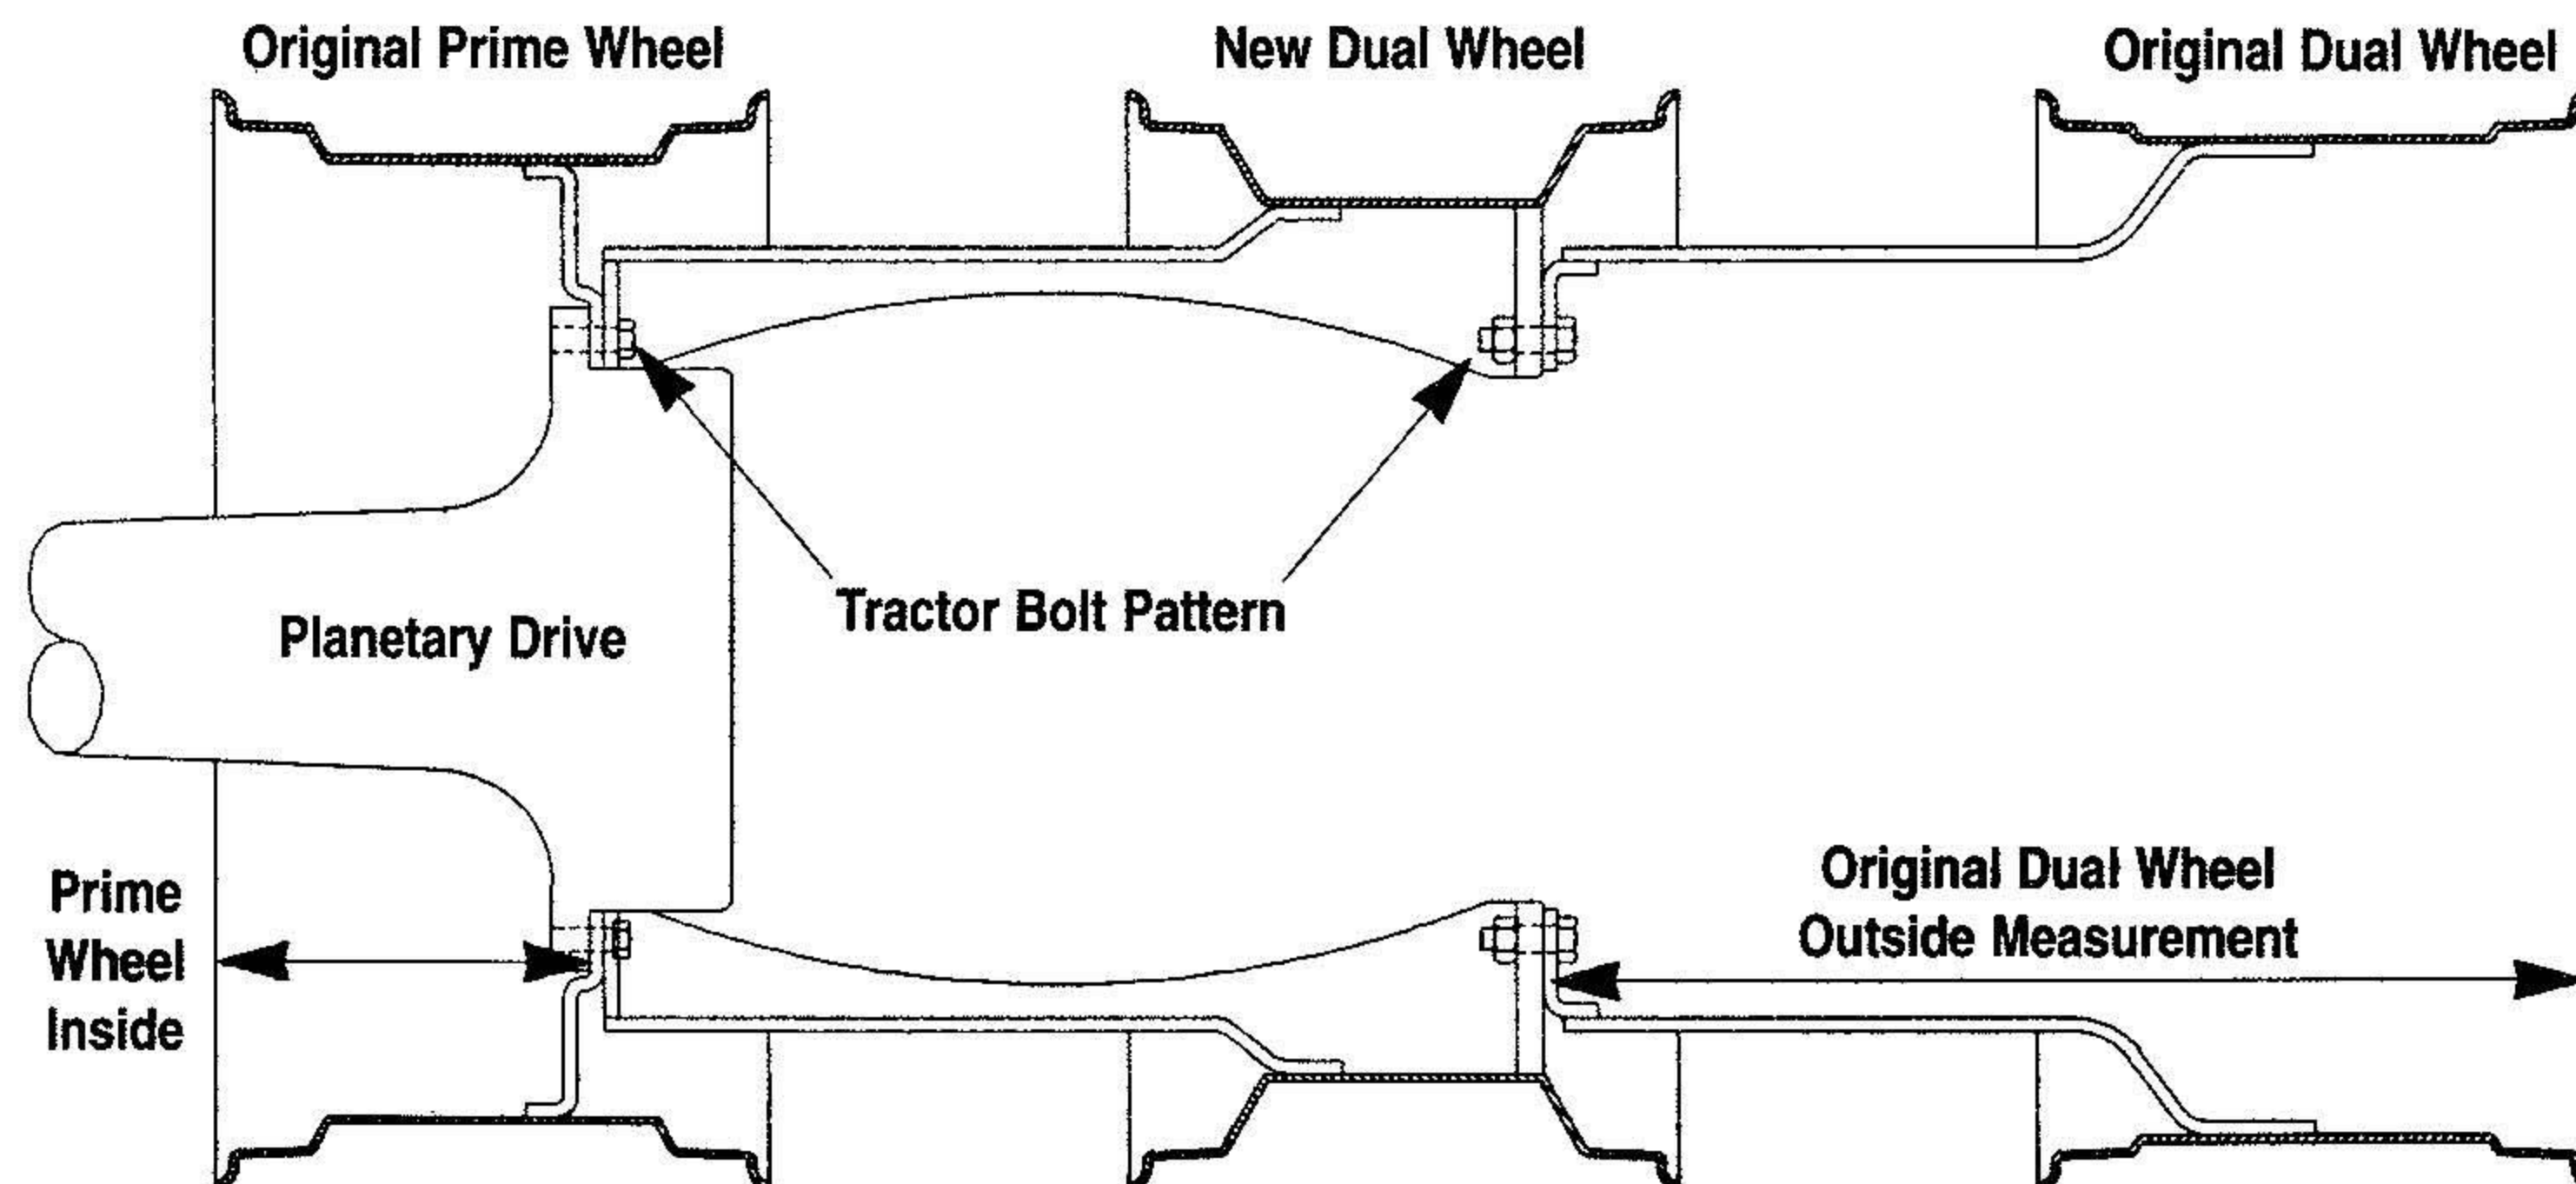

This system uses the original prime wheel as the prime wheel. A new dual wheel consists of a plate center, a spacer band with a center, and gussets welded into the rim. This dual wheel bolts to the main bolt pattern on the tractor. The original dual wheel is used as the triple by bolting to the plate center in the new dual wheel.

### Kit Includes:

(4) Dual wheels

(4) Bolt kits to bolt the triple wheel to the dual wheel

Tire Size	Wheel Size	Original Prime Wheel Inside	Original Dual Wheel Outside Meas.	Space Between Tires w/ Conversion		Wt. in lbs.
				Prime Dual	Dual Triple	
18.4 - 38 18.4R38	16 x 38	11-1/2" 12-1/4" 13"	34"	9	9	2,224
20.8 - 38 20.8R38	18 x 38	11-1/2" 12-1/4" 13"	36"	7	7	2,292
18.4 - 42 18.4R42	16 x 42	11-1/2" 12-1/4" 13"	34"	9	9	2,762
20.8 - 42 20.8R42	18 x 42	11-1/2" 12-1/4" 13"	36"	7	7	2,830
18.4R46	16 x 46	11-1/2" 12-1/4" 13"	34"	9	9	2,858

All measurements on the above chart are approximate.

### Bolt Pattern Verification

Tractor Make	# of Bolts	Bolt Circle Diameter	Bolt Hole Size	Pilot Hole Size
Case IH/Stieger	10	20-1/8"	15/16"	17-7/8"
	20	20-1/8"	15/16"	17-7/8"
Ford/Versatile	16	25-11/16"	15/16"	23-7/8"

When ordering triple conversion kits for this page, please specify the following information:

- Verify the tractor bolt pattern
- Verify prime wheel inside
- Verify dual wheel outside
- Tractor make and model
- Paint color